


# *Case*

*Toyota Land Cruiser FJ60*

*Roll Out Drawer Tool Box*

*Designed by J. Brantley*

*March 7, 1999*

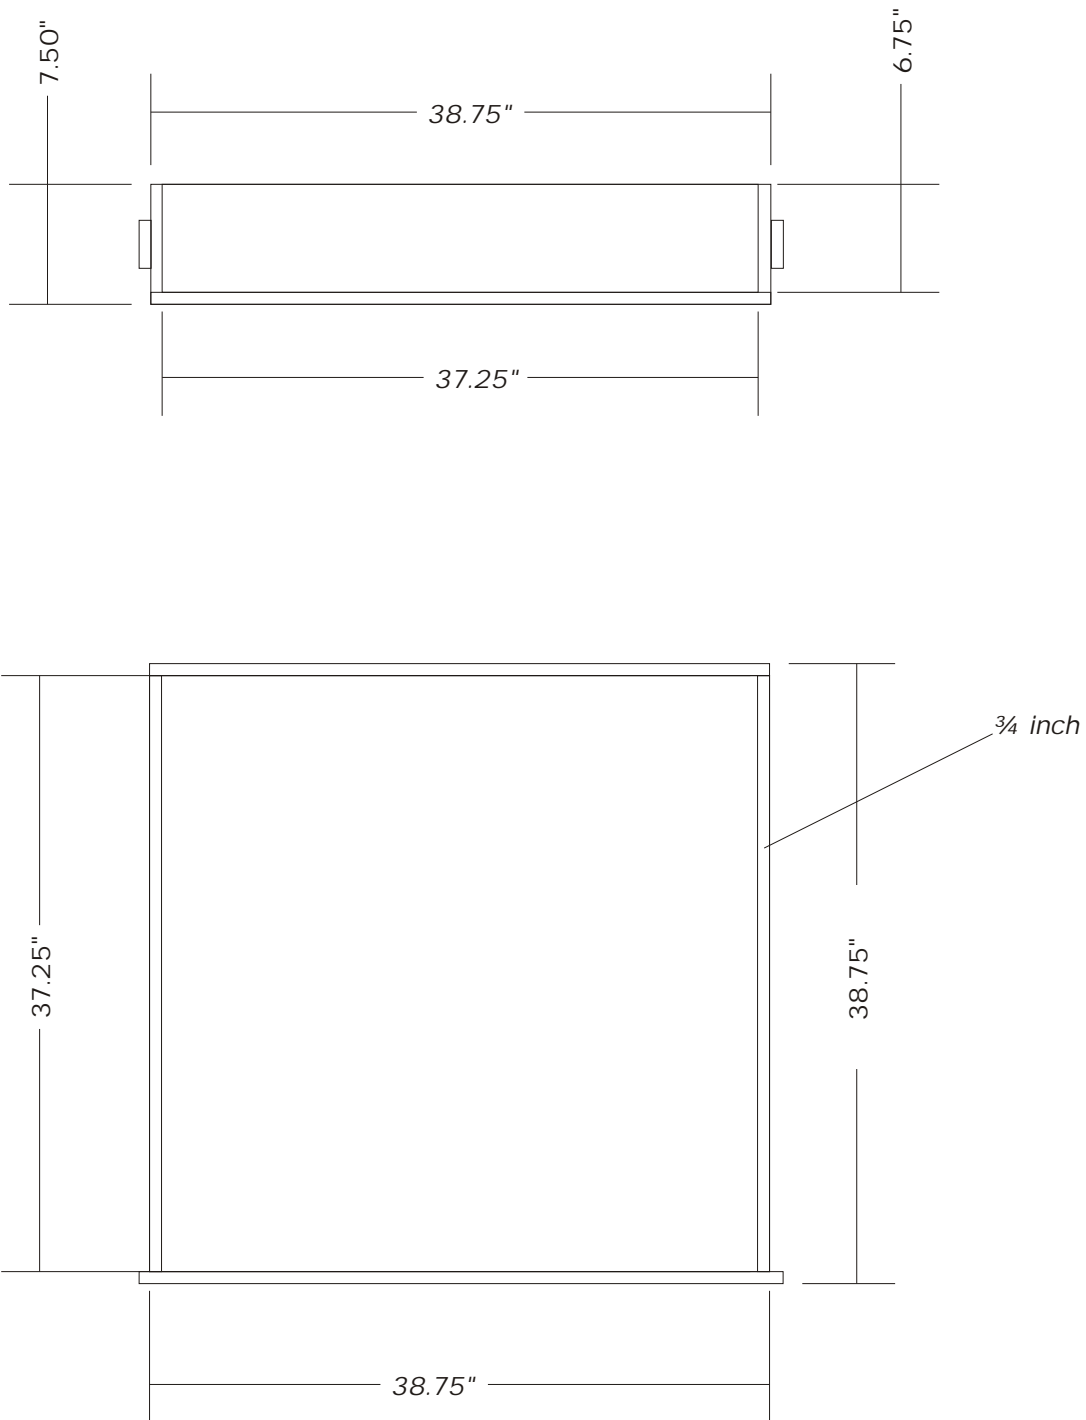


# *Drawer*

*Toyota Land Cruiser FJ60*

*Roll Out Drawer Tool Box*

*Designed by J. Brantley*

*March 7, 1999*

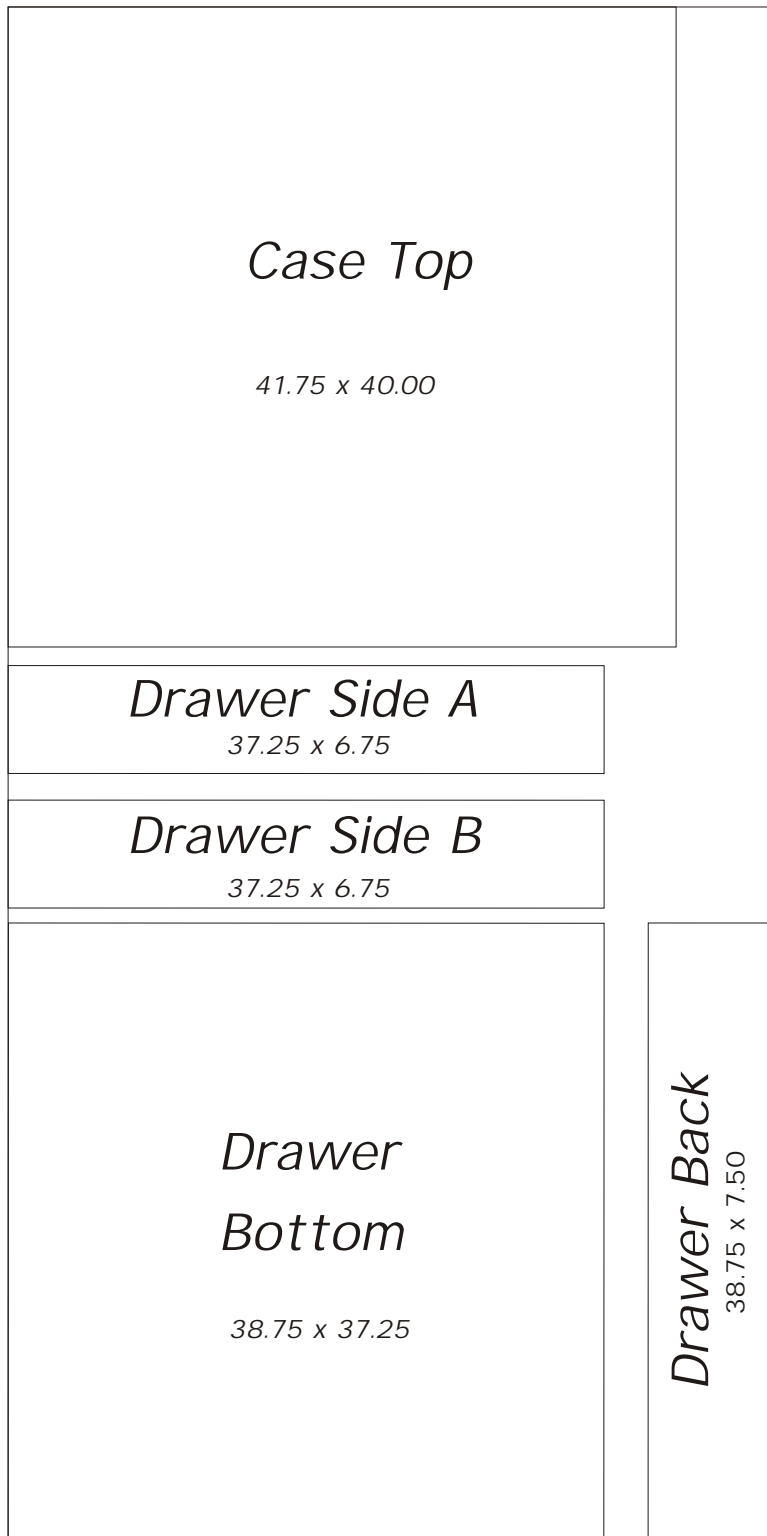

*$\frac{3}{4}$  inch*


*4 x 8 sheet*

*Toyota Land Cruiser FJ60*

*Roll Out Drawer Tool Box*

*Designed by J. Brantley*

*March 7, 1999*

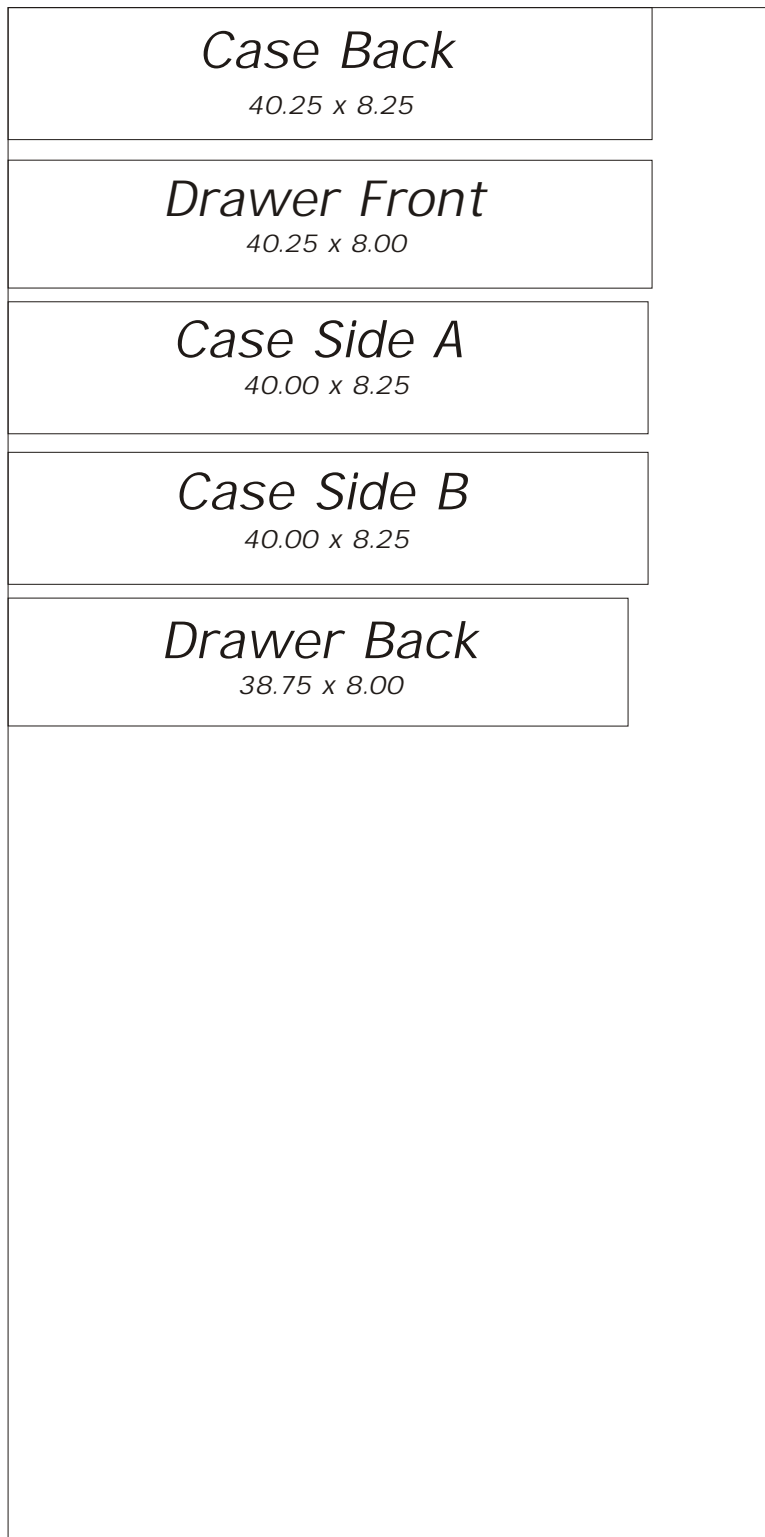

*$\frac{3}{4}$  inch*

*4 x 8 sheet*

*Toyota Land Cruiser FJ60*

*Roll Out Drawer Tool Box*

*Designed by J. Brantley*

*March 7, 1999*


*Case  
Bottom*

*41.75 x 40.00*

*3/8 inch  
4 x 8 sheet*

*Toyota Land Cruiser FJ60  
Roll Out Drawer Tool Box*

*Designed by J. Brantley  
March 7, 1999*

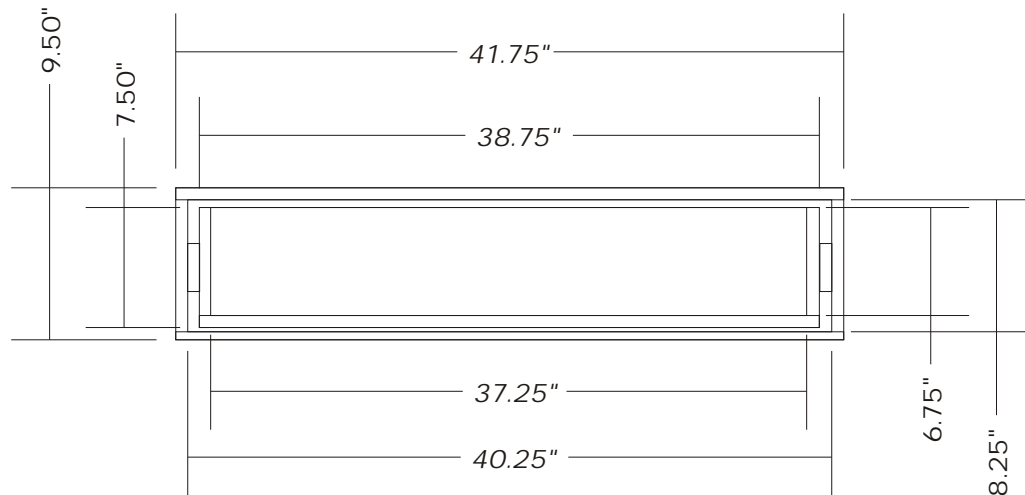

HETTICH AMERICA, L.P.  
6225 SHILOH ROAD  
ALPHARETTA, GA 30202

GRANT

## 3320 DRAWER SLIDE

<p>Casing sides should be parallel. Drawer width should be 1-1/2" to 1-9/16" less than opening.</p>	<p>Locate slide assembly in casing and fasten. Fully extend slide; some mounting holes will be accessible. Balance of holes will become accessible by moving the intermediate channel until an access hole falls over desired mounting holes.</p>	<p>Fasten the drawer member by fully extending the slide. Some mounting holes will be accessible. Install screw, snug only, in vertical slotted hole. Balance of holes will become accessible by moving the drawer member until an access hole in the intermediate channel falls over the desired mounting hole. Insert screw in horizontal slot, to a snug fit. Push drawer into unit, adjust and tighten screws. Install remaining screws.</p> <p>#10 x 3/4" long flat head screws supplied for case members. #10 x 3/4" long pan head screws supplied for drawer members.</p> <p>A-Q/1-11-0041-00-0</p>
---	---	--

*Toyota Land Cruiser FJ60*

*Roll Out Drawer Tool Box*

*Designed by J. Brantley*

*March 7, 1999*